SPINS SOUTHERN PACIFIC INDUSTRIAL NUMBERING SYSTEM

Spins is a standard method of identifying industries and switching zones, tracks and consignee loading and unloading spots. By giving zones, tracks and spots certain designated numbers, we are able to print switch lists with the exact location to which a customer's car is to be spotted.

A spins number contains up to six digits. The first two digits indicate the zone to which the car is destined, the next two digits indicate the track number within the zone, the last two digits are the actual spot or coded spot.


EXAMPLE:

Spins coded 473701 means that the car is for Zone 47, Track 37, Spot 01 on that track.

Zone and Track number appear on switch targets. Spot signs are placed where customers normally load or unload their cars.

Spot signs are 6" x 6" green metal signs with 4" white reflectorized numbers. These signs are placed at center of a car spot for spotting if possible from either side of car.



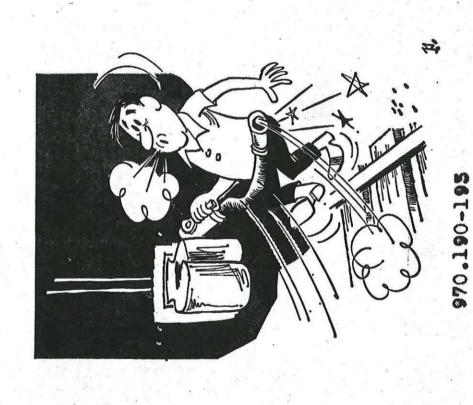

COYOTE

MONTEREY

DAVENPORT

FOR TOUR SAFETY. Be Alert to the Principal Sources

R W DANLEY 548 62 5897



Watch Out for Slack Action! Don't Be A Fall Guy



Procedures listed below must be complied with in filling out the printed lists.	4
Cars properly spotted or placed opposite each show the letter "S" and write time placed to the nearest hour.	<u>.</u> , 5
Cars not spotted according to list, opposite each show "00"	6

2. Cars not spotted according to list, opposite each show "00" for off spot code, actual location-track and or where car was placed and reason why car could not be spotted.

1.


Opposite each show the letter "P" write the time to the nearest hour, if car is left in the industrial area, show track and time.

- 4. Respotted or switched car, opposite each show the letter "R", new location (Zone, Track and Spot) of car and write time to closest hour.
- on duty time on all lists in space provided.
- 6. Any cars not shown on the printed lists and are pulled from an industry, write car initial and number as well as track pulled from on the Zone-Pull list.
- 7. Return finished printed spot and pull lists as soon as possible to instructed office.
- 8. If not furnished a spot and or pull list, then all cars switched must be listed on a Form 16 and turned in at instructed office.


SPOTTING CODES


(*)	Asterisk before and after a spot number indicates preferred spots.	95 96	Dock spotting Piggyback	
	SPECIAL SPOT NUMBER CODED The last two digits of a SPINS	97	Auto Ramp	
number may convey	number may convey a special meaning and are listed below:	98	Interchange to other railroads	
90	Team track spotting	99	Open area where not possible to put up spot signs	
91	Storage track	00	When a car cannot be spotted	
92	Denotes industry will either do the switching or furnish a switch list		according to the switch list and is left off spot, 00 will be indicated on the returned list. If car is left on a	
93	Crane spotting		track other than designated on list, Track number & Spot	
94	Hopper dump		where car is left will be shown in addition to 00	


LANDMARK SYMBOL LEGEND Sheet 1

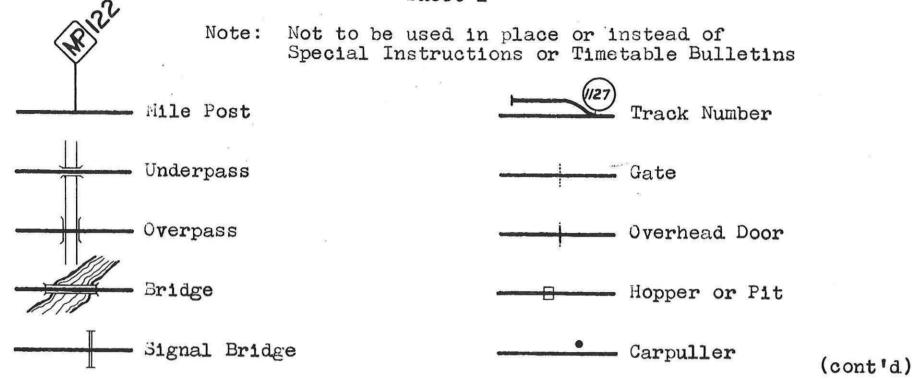

LANDMARK SYMBOL LEGEND Sheet 2

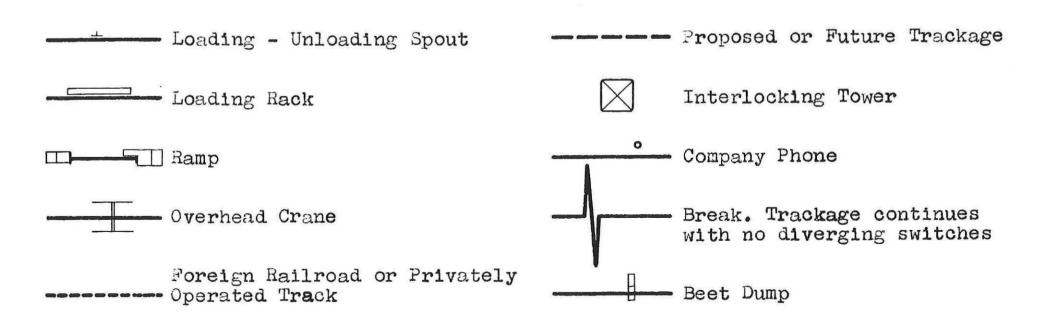

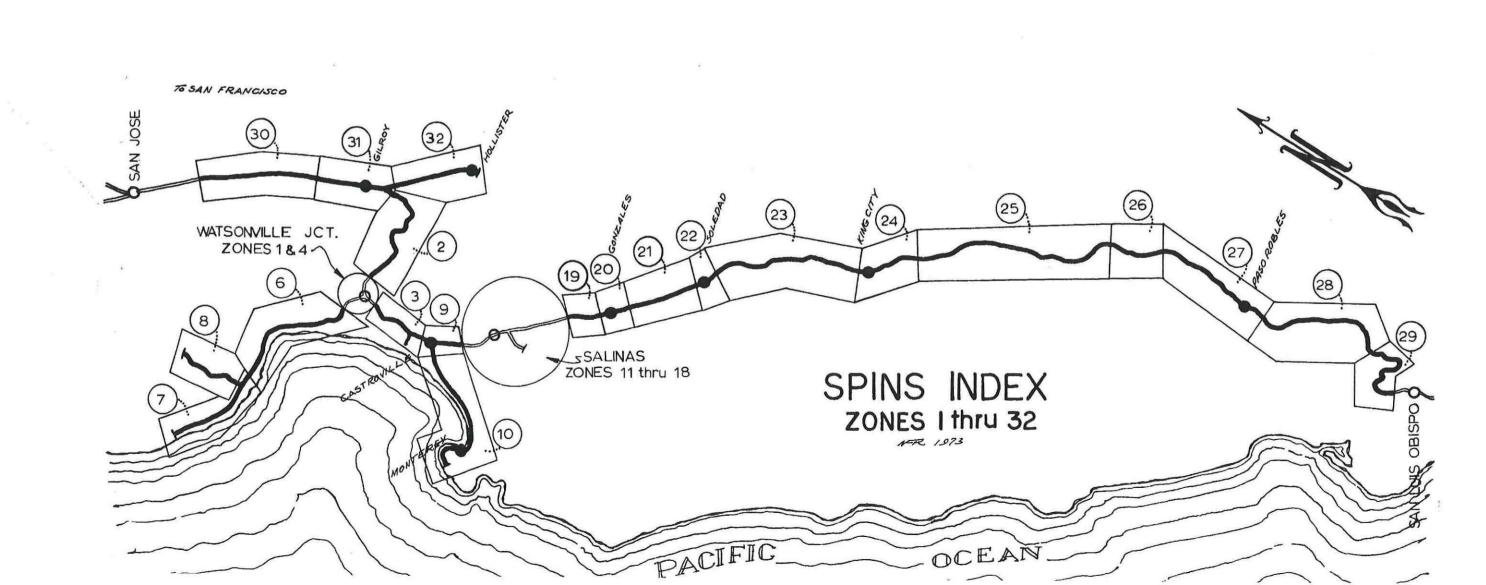

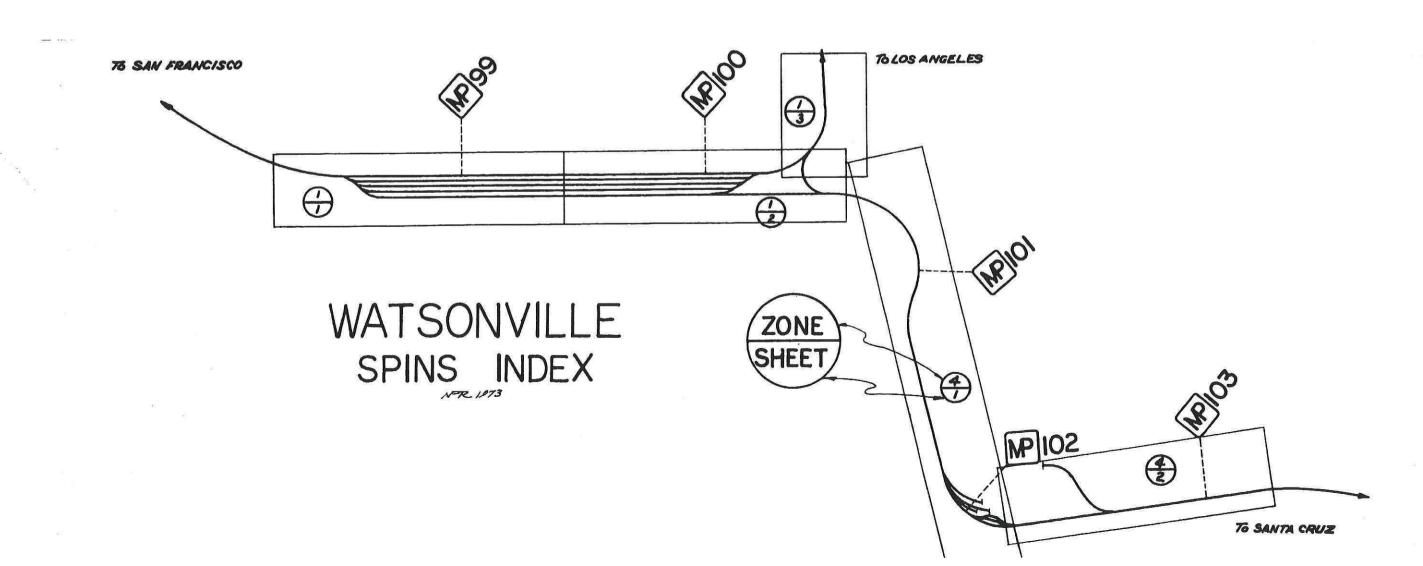

COOPER

SALINA

SPRECKELS JCT.

SPENCE

ZONES II thru 18

CHUALAR

